



Contents


In the box	2
How to connect	3
Controller Overview	3
Set up X-Mount	4
	4
Notice	5
Warranty	5
Inapplicable Warranty	6


This product is a portable and flexible LED light.

Please read this operation instruction before using the product.

Stop using this product when abnormal operation is detected and contact the authorized dealer of its purchase location.


In the box

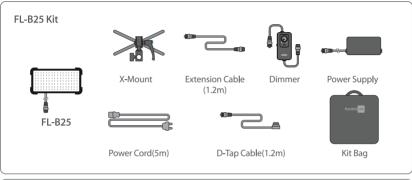

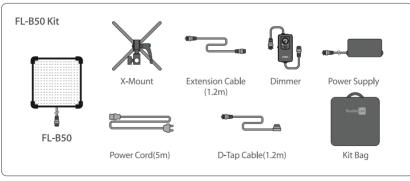


How to connect

Please connect to power supply or V-Mount / Gold Mount Battery in the following order.

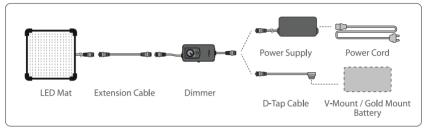

Controller Overview

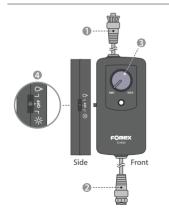

- 1 Connect the LED Mat cable (1m) to Controller output cable.
- ② Connect DC power output jack to the Controller when using the power supply or V-Mount / Gold Mount Battery.
- 3 Adjust brightness with the DIM dial.
- 4 Select switch. $\c :$ Daylight, OFF :Turn OFF, $\c :$ Tungsten

Set up X-Mount



- 1 Insert X-Mount in the rear corner of LED Mat Clips.
- 2 Install X-Mount on a stand or tripod after firmly fitted with LED Mat.

Technical Specifications

Model	FL-B25	FL-B50
Light Output	750lux @1m: 3200K / 800lux @1m: 5600k	1500lux @1m: 3200K / 1600lux @1m: 5600k
Power Consumption	25W	50W
CRI / TLCI	CRI 95 / TLCI 98	
Color Temperature	3200K c	or 5600K
Controller	0~100% DI	M / Manual
Light Output Connector	4Pin Wa	terproof
IP Rating	IP	64
DC Input	15\	DC
Beam Angle	120°	
LEDs	240	480
Dimensions (mm)	136.5 X 245	245 X 245
Weight (g)	346g	397g
Power Supply	Input: AC100 ~ 240V 50/60Hz Output: 15V == 4A 60W	
	Output: 15	V 4A 00VV

Notice

- 1. Must use supplied Power Supply only. Otherwise, it may cause a problem.
- 2. Do not use in rain or in a humid place.
- 3. Keep away from flammable objects.
- 4. Operating temperature range is from 0°C ~ 40°C.
- 5. Handle with care when you used over a long period due to the build up of heat.
- 6. Do not fold LED Mat or bend it more than 60 internal degrees.
- 7. Keep away for from children.
- 8. Do not handle the product with a wet hand.
- 9. Do not drop or give shock on the product.
- 10. Turn off power after use and keep the product in Kit Bag provided after cooling down.
- 11. Unable to receive A/S warranty with self-repaired products beforehand, and we're not responsible for product damage.

Warranty

Warranty provisions for this product are listed below:

- 1. During the warranty period, repair the defects using new or renovated parts without any charge, or exchange the defective product with a new product or a product which has been manufactured by new or refurbished components and is functionally equivalent to the normal product.
- Apply only to the original product that can be identified by the trademark, trade name, or logo affixed to the product.

Inapplicable Warranty

- 1. Expired warranty period.
- 2. Breakage or damage caused by inappropriate usage, repair, maintenance and accident.
 - 1) Installation and removal with improper external equipment or improper usage.
 - 2) Damage to the product caused by external fault or any accident.
 - 3) Exposure to the extreme environment of abnormal temperature, a solvent, an acid, a base, a flood and a humid
 - 4) External damage such as scratch, dent and breakage.
- 3. Unusability or damage caused by installation, repair, improvement, addition, disassembly by unauthorized institution or person.
- 4. Modified, replaced, removed information identifying the original product.
- 5. Absence of valid warranty card.
- 6. Unusability or damage caused by usage of illegal nonstandard and unofficial software.

Please keep the proof of purchase and this warranty card for future service.

Customer Information	Name
	Contact Number
	Address
Seller Information	Name
	Contact Number
	Address
	Purchasing date
Product	Name



www.fomex.com

Unit701, 31-18Gil, Seongsui-ro, Seongdong-gu, Seoul Korea 04787 Tel: +82 2 545 0004 Fax: +82 2 3444 9399 E-mail: info@fomex.com All product specifications are subject to change without notice.

