

H1000 & HD series

How to install Halogen lamp & Pyrex dome

⚠ Please read the instructions carefully before use.

Assembly instructions

This manual is to provide the instructions to properly assemble the halogen lamp and Pyrex dome of Fomex H1000 and HD series.

Please read the instructions carefully before use

Components

Please check the components.



Studio flash : 1ea

Pyrex dome : 1ea (Mounted to studio flash)

Protection cap : 1ea (Mounted to studio flash)

Power cable : 1ea

Halogen lamp : 1ea

A glove of for lamp assembly : 1ea

Sync cable : 1ea (for HD)

User Manual : 1ea

Assembly Instructions : 1ea

Instructions for protection cap



Fomex protection cap is used to protect both the flash tube and the modeling lamp during carrying or storage. Please remove the protection cap before using the studio flash.

When replacing the protection cap after using the flash studio, please wait until the halogen lamp and Pyrex dome have cooled down because the remaining heat from the halogen lamp may melt or deform the protection cap.

Instructions for pyrex dome




It protects users from the damage of lamp by heat.

Assembly steps

1. Push the LOCK knob back and hold the protection cap then turn it counter-clockwise.



2. Holding the studio flash with one hand and pyrex dome with the other hand, slightly press the pyrex dome and turn it counter-clockwise.

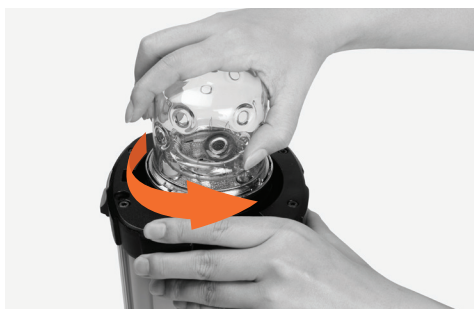

3. Please wear the glove enclosed and make sure the terminal of the halogen lamp is aligned with halogen lamp socket hole and stick the halogen lamp in. (Stick the halogen in until the terminal is invisible)



4. Clean the halogen lamp with the glove or other clothes to remove foreign substances.



5. Take the glove off and hold the pyrex dome with one hand, make sure it is aligned with the hole.



Then slightly press the pyrex dome and turn it clockwise until you can hear a "Click" sound.



6. After assembling, use the glove or clothes to clean the pyrex dome.

